



UP active heat sink exchange SOP

V1.0

1. Active heat sink front view

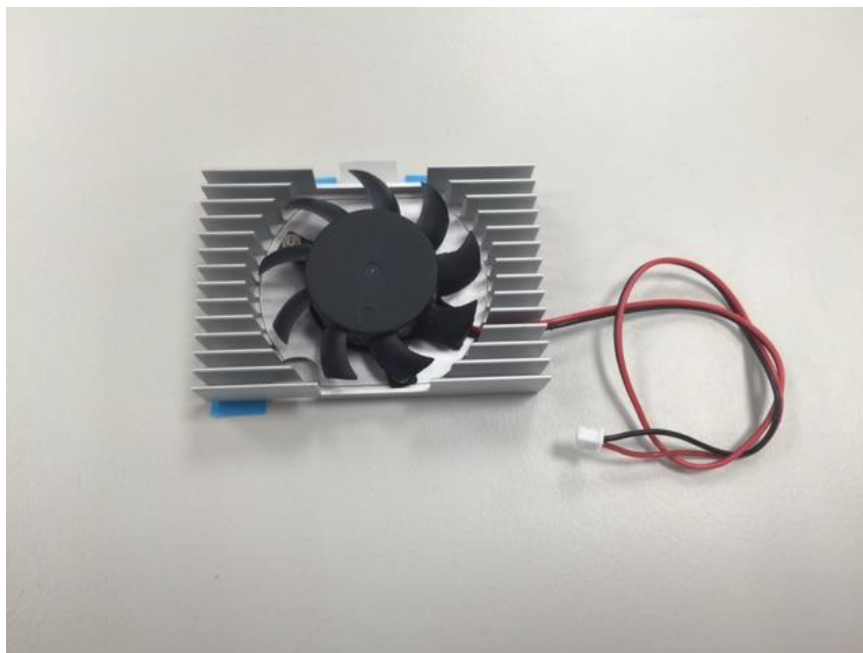


2. Active heat sink back view

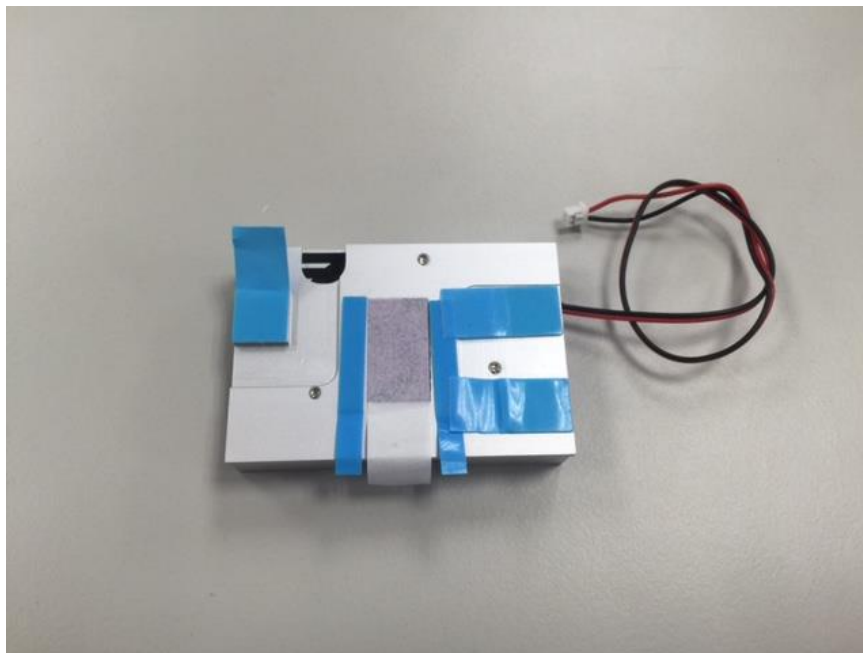

3. UP board with passive heat sink




4. Remove passive heat sink by hand

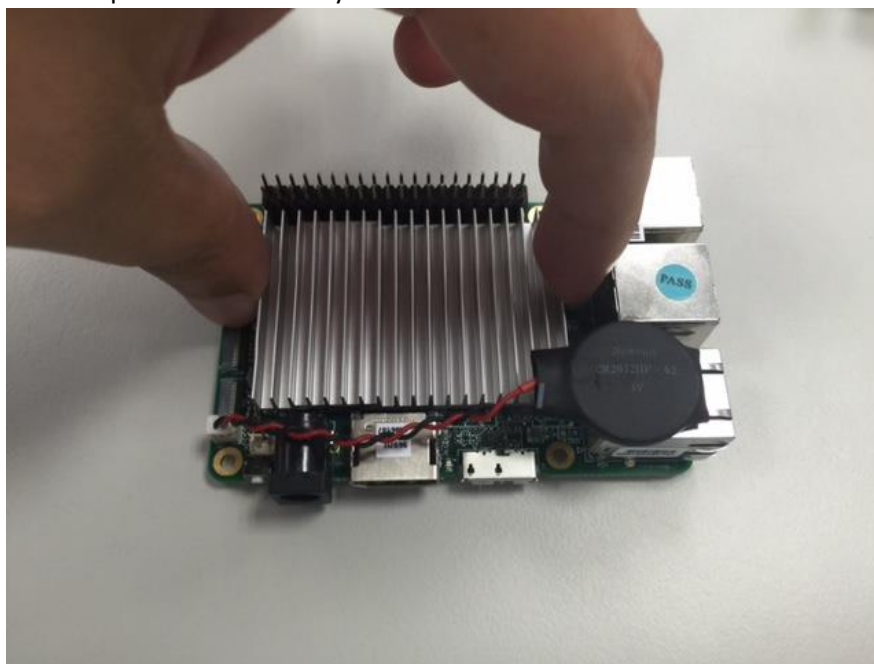


5. Passive heat sink removed



6. Remove protection tape on cooler heat sink

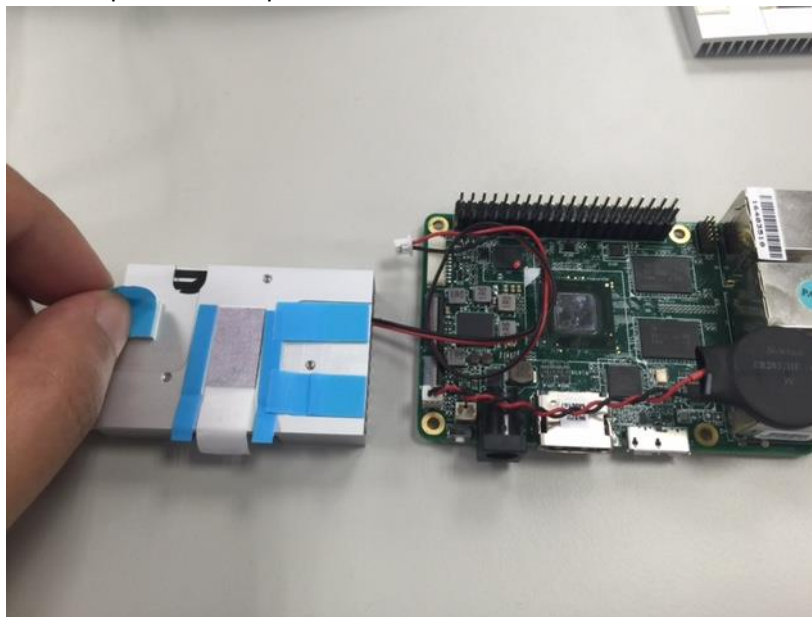

7. Apply active heat sink on UP board and press down to stick

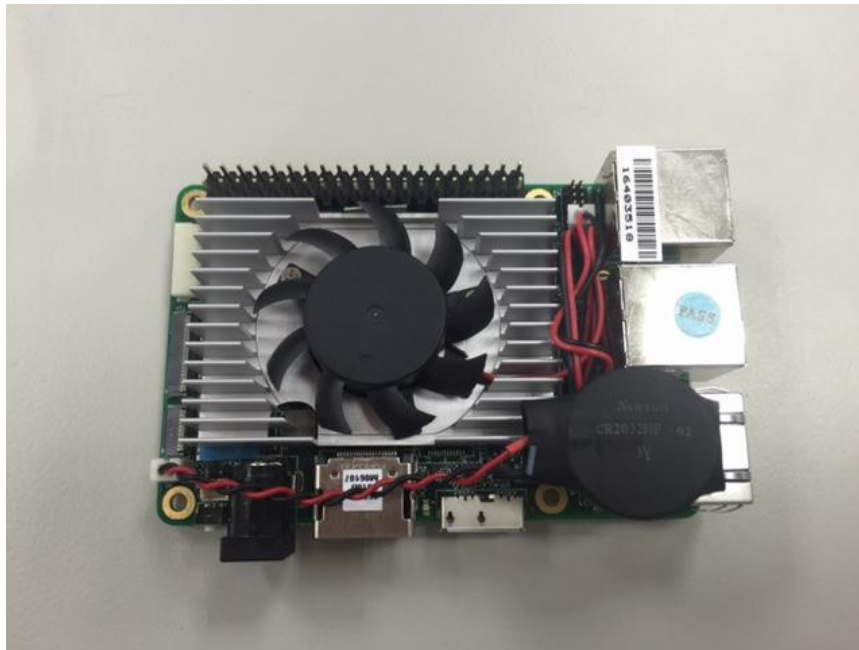

8. Plug in active heat sink 2 pins header to the first 2 pins of upper right hand pin header



9. Enjoy new cooler heat sink