





UP POE V2 Expansion Board Installation SOP

Presenter : Willy Chen


Date : 2023/02/07

Step 1:
Disassemble the 4 screws in red circles and keep the screws.

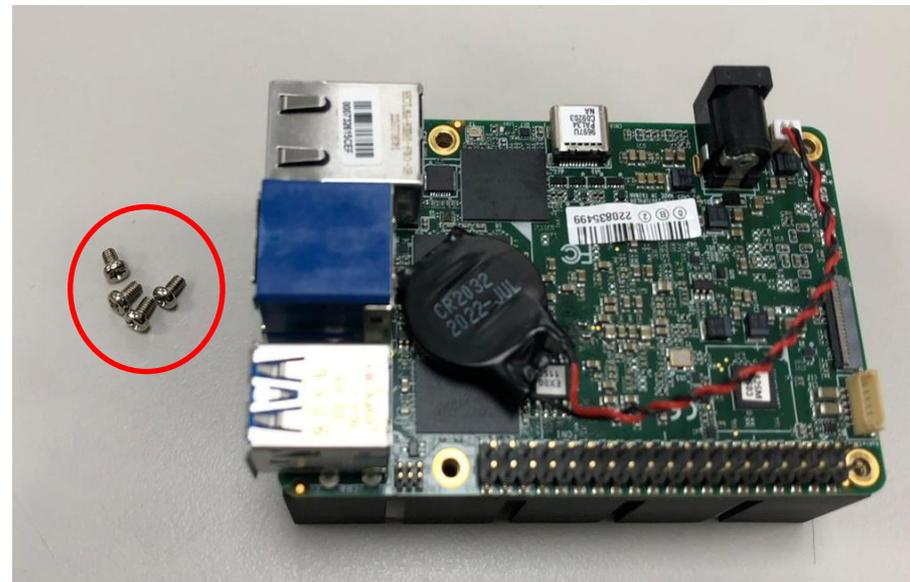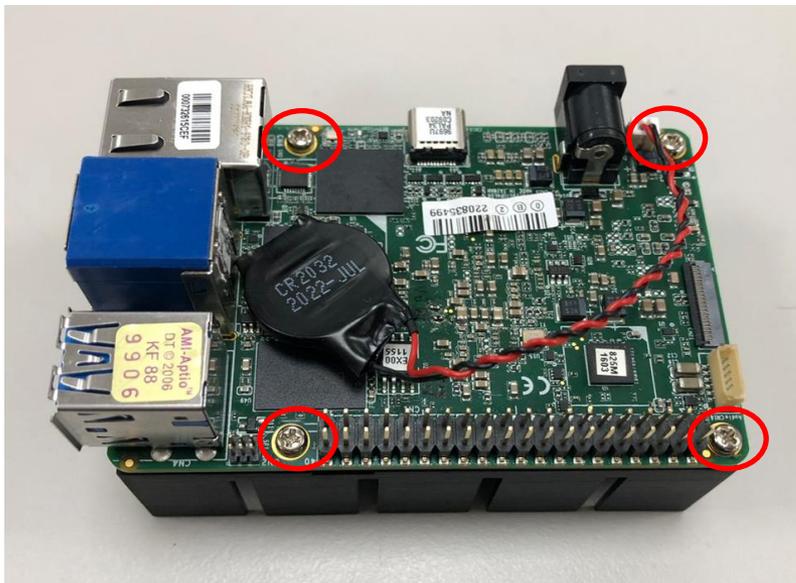

Step 2:

Assemble the 4 hexagonal stud spacers in red circles. Unlock the FPC connector.

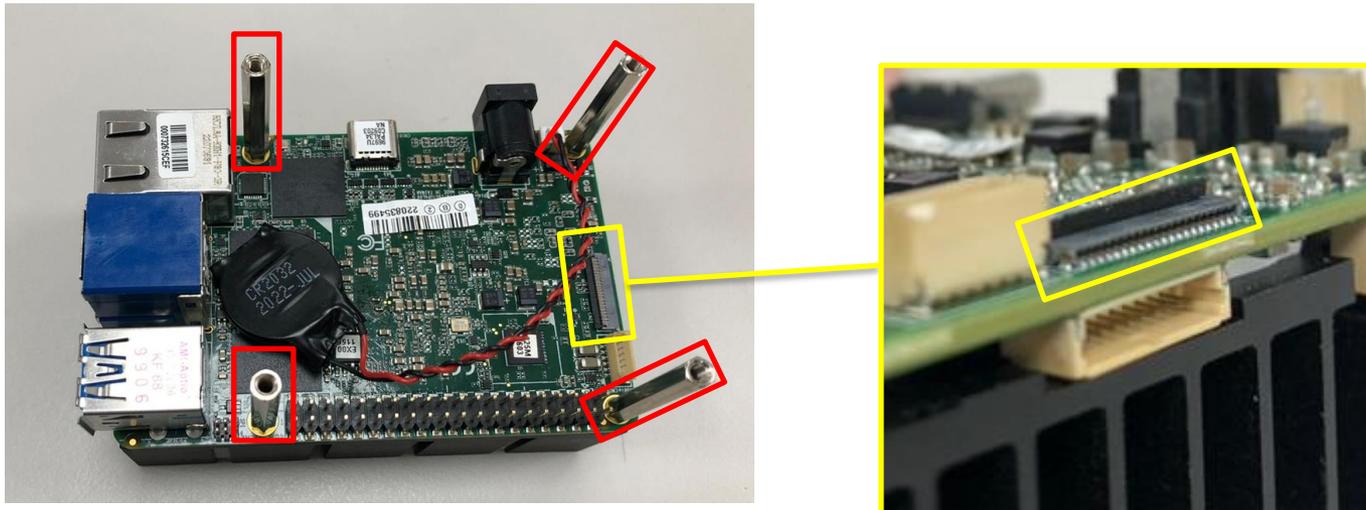


Step 3:

Connect the FPC cable to FPC connector. Make sure the printed side on the cable faces up.




Step 4:

Assemble the POE V2 expansion board on top of the board to the spacers. Use the 4 screws from Step 1 for the assembly. Connect the other side of the FPC cable to the FPC connector of the expansion board.

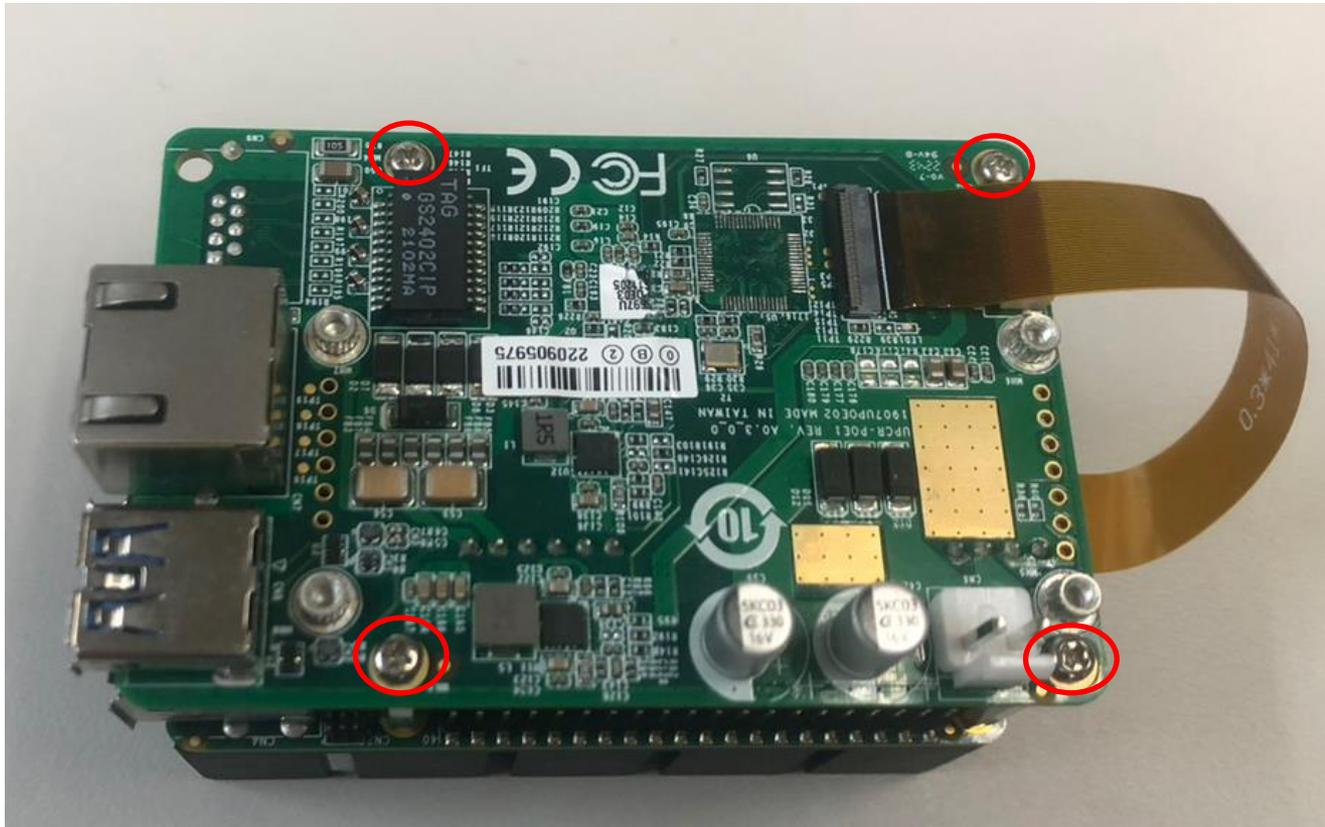

Step 5:

Connect the power cable to the DC Jack of the main board and the wafer of the expansion board

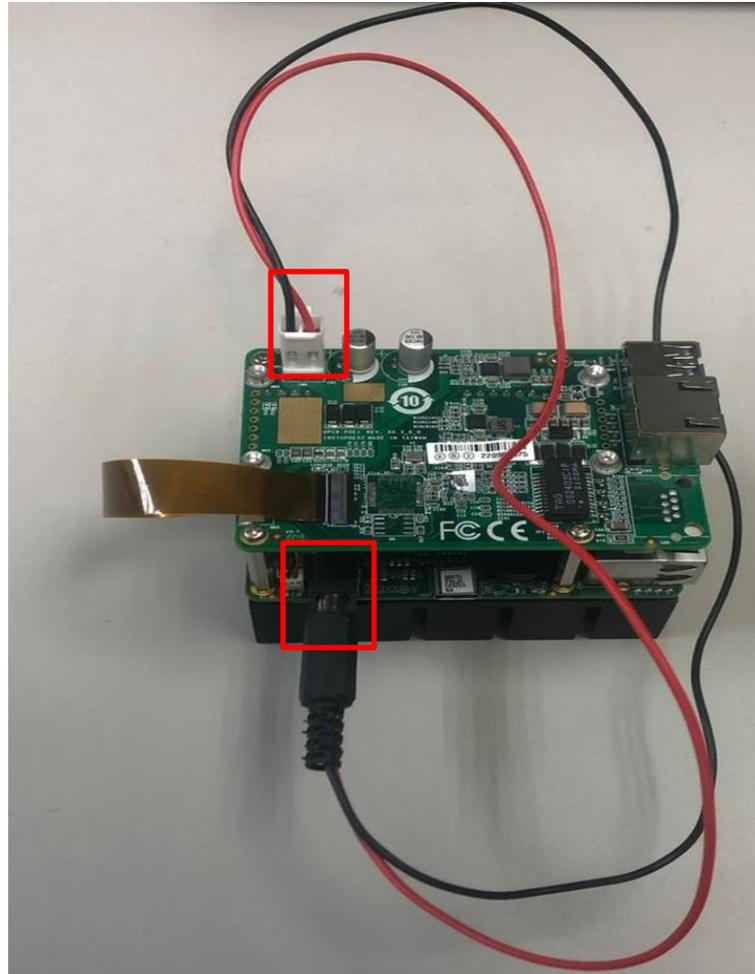

Follow us

THANK YOU

