

## Quick start guide UP<sup>2</sup> Chassis - EP-CHUPSMTVAUPS



### Parts List

- Top cover with Logo Plate 1pc
- Middle Case 1pc
- Bottom Base 1pc
- Vesa Mount Plate 1pc
- Hex Standoff 4pcs
- Screw 10pcs

Not included with the kit, you may need to prepare:


- UP squared board.
- Small screwdriver.

bridge  
the gap


As always, go check out [up-community.org](https://up-community.org)  
for support and more information about your UP board

Assembly step


1. Depart the top cover and middle case in the **diagonal direction**.

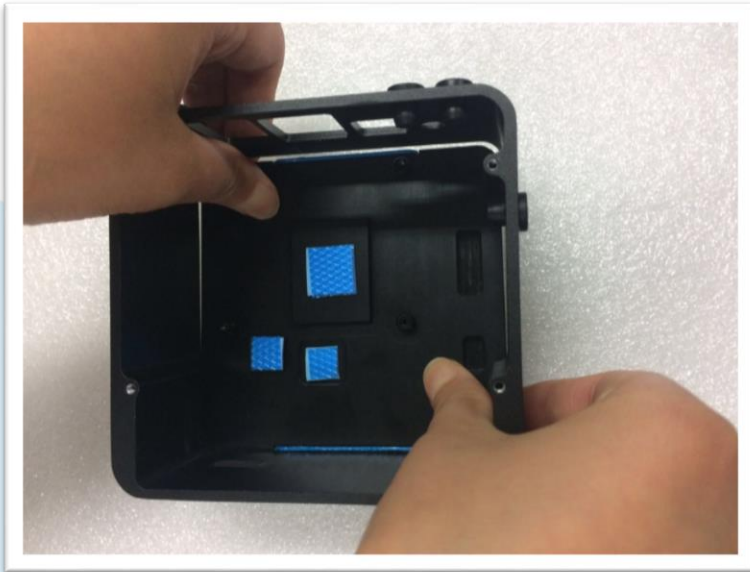

2. Put the top cover on the operation desk

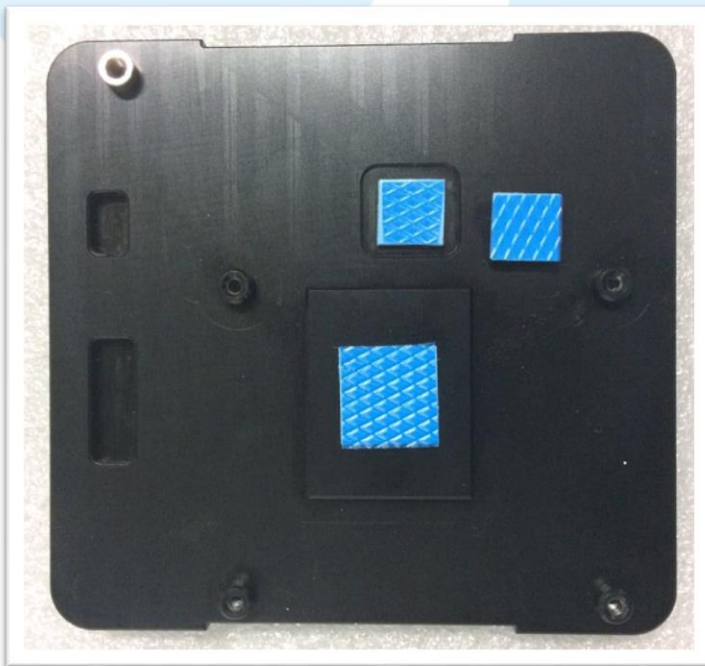

3. Peel of the blue protection film of thermal pad

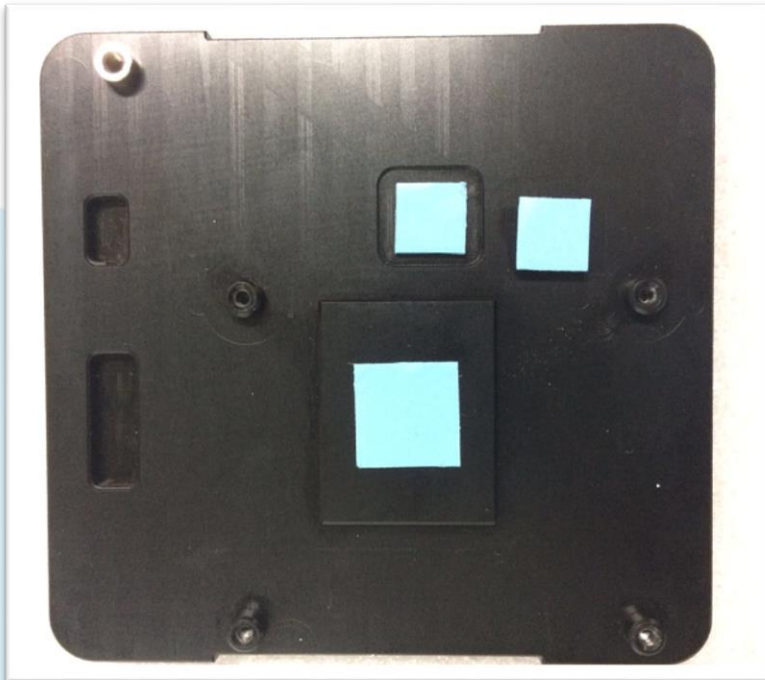

4. Start to screw 4 Hex Stand-offs on the PCB.




5. Fasten the PCB with top cover by the hex standoffs through the threads nut on the top cover.



6. Place the board into the middle case, check well with the 4 sides exactly that match the IO sides.




7. Fasten the bottom plate with PCB by screws x 4pcs

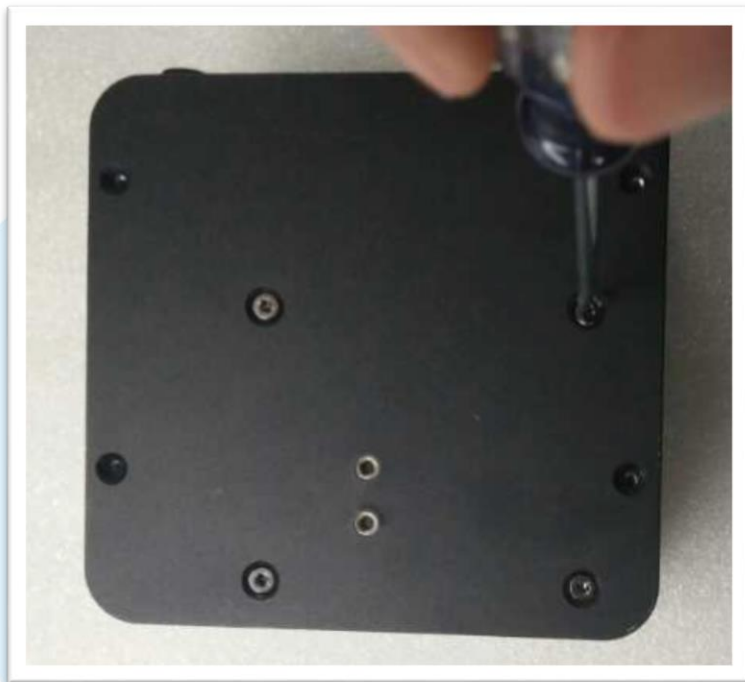


8. Fasten the bottom plate with top cover by screws x 4pcs



9. Fasten the Vesa Mount with pre-assembled case by screws x 2pcs

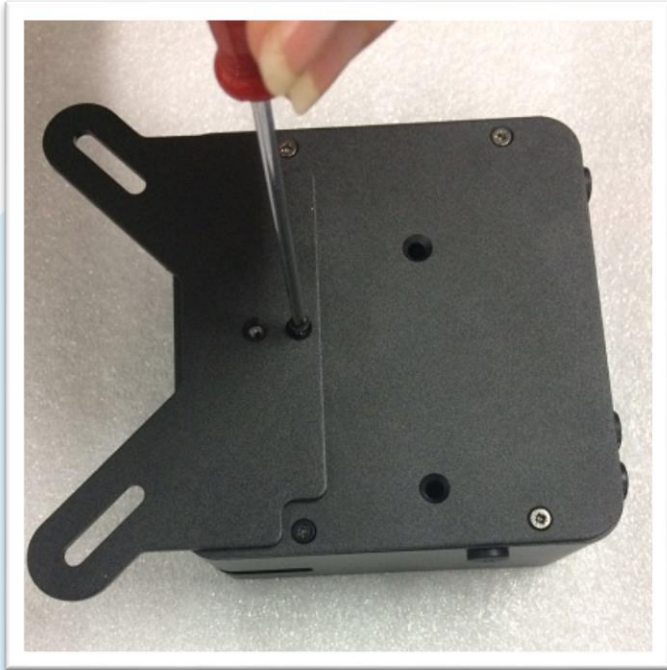

Exploded view including all components

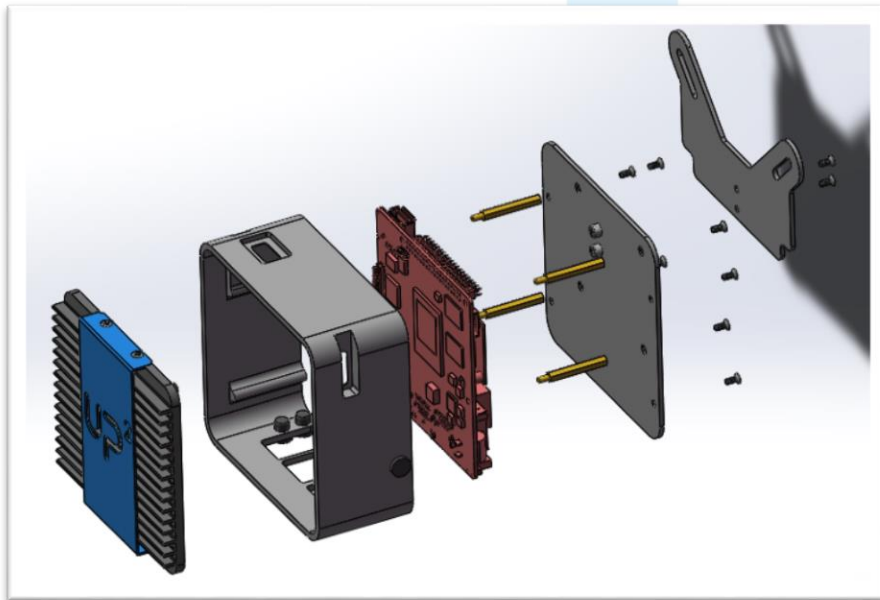

ge  
gap