




UPN-EHLCB-A10-001

Assembly SOP

Step 1: Prepare the materials

Make sure you get all materials ready:


1. UP Squared 6000
2. Carrier board
3. 7x Studs
4. 2x nuts

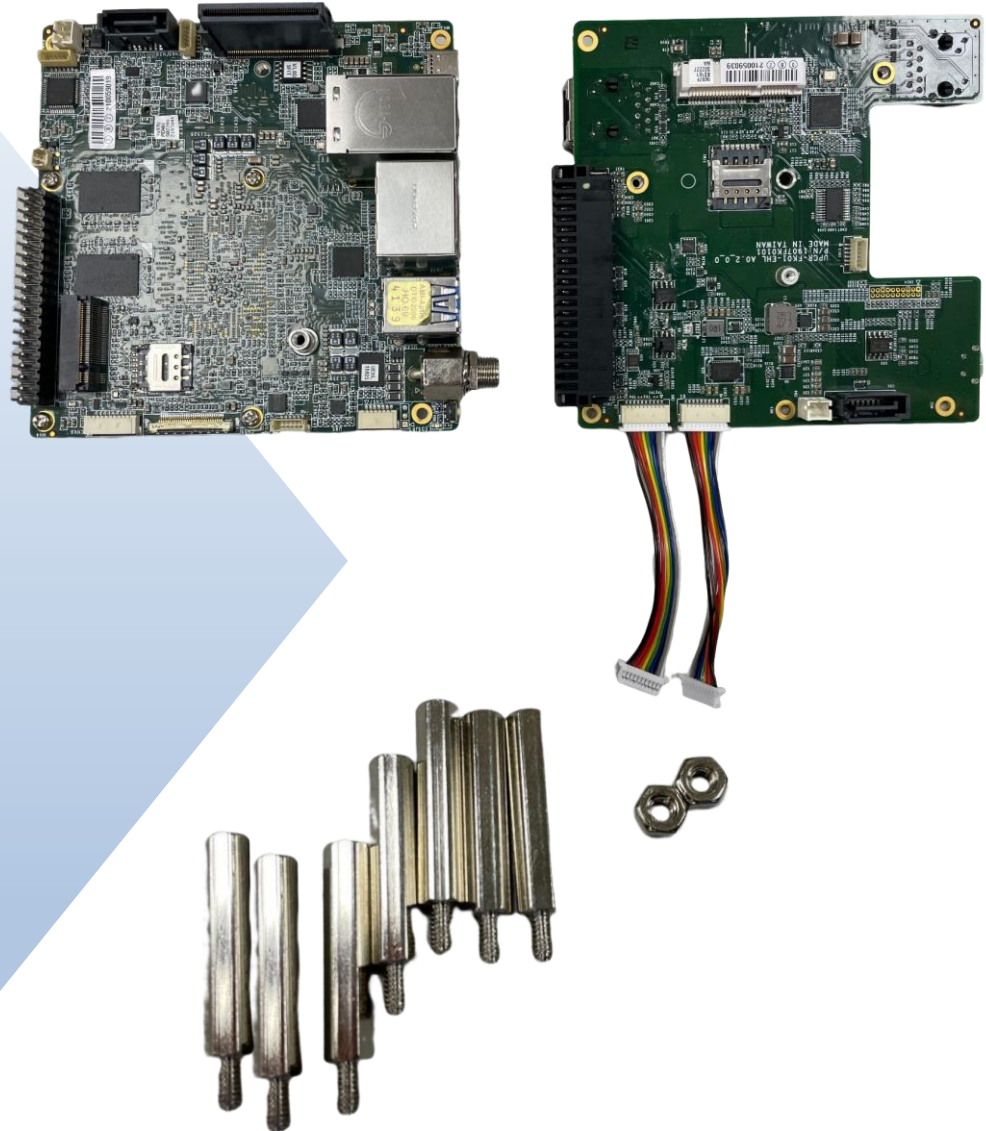


Step 2: Fix the studs

Main board Setup:

1. Find the edge with eDP conn.

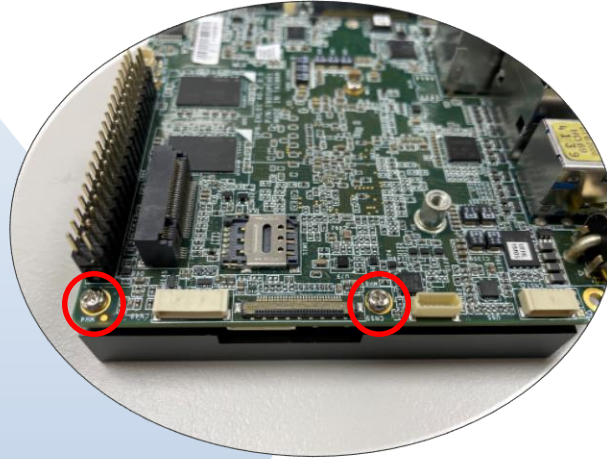

2. Remove the 2 screws on the board which are used to fasten the heatsink.

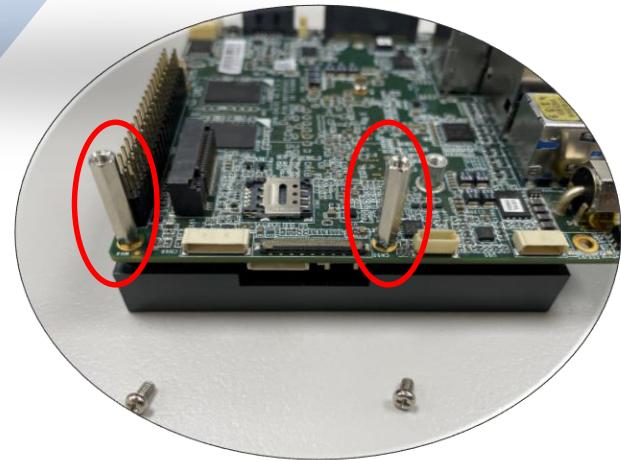

3. Replace with 2 studs to fix the heatsink.

Carrier board Setup:




1. Find the holes next to LAN port and SATA port on carrier board.
2. Fasten the 2 nuts and 2 studs together.
3. Fix one stud to the hole behind the LAN port.



Step 3: Assembly

Assemble 2 boards:

1. Connect 2 boards via 100pin conn.
2. Fix the last 2 studs on carrier board as the stands.
3. Plug in the 2 cables to main board.

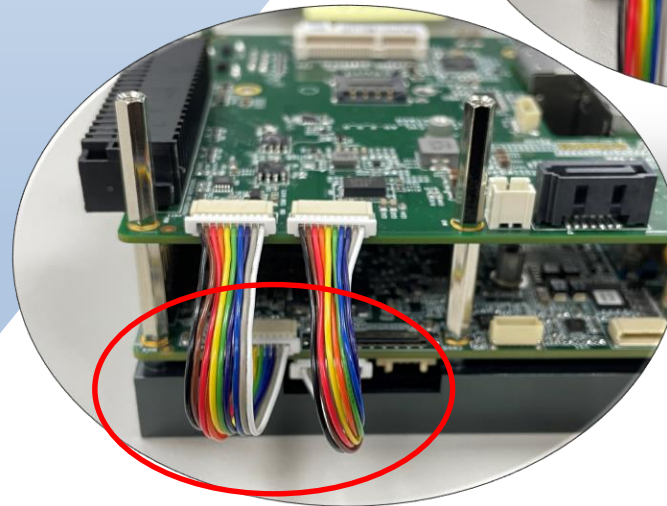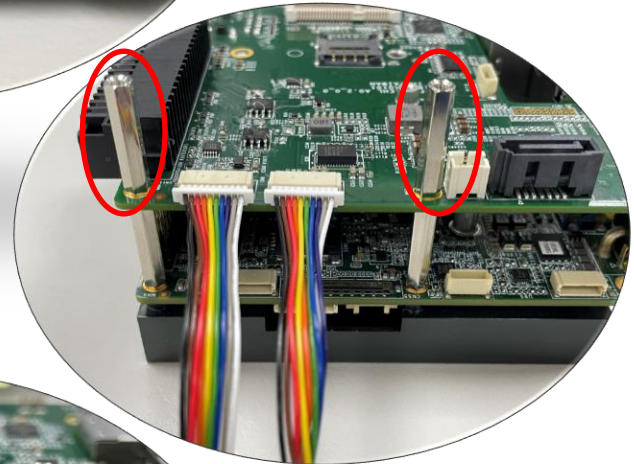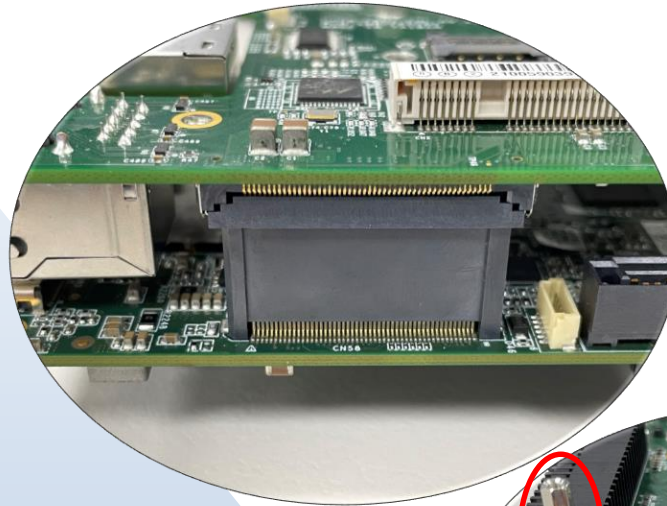

Thank you!