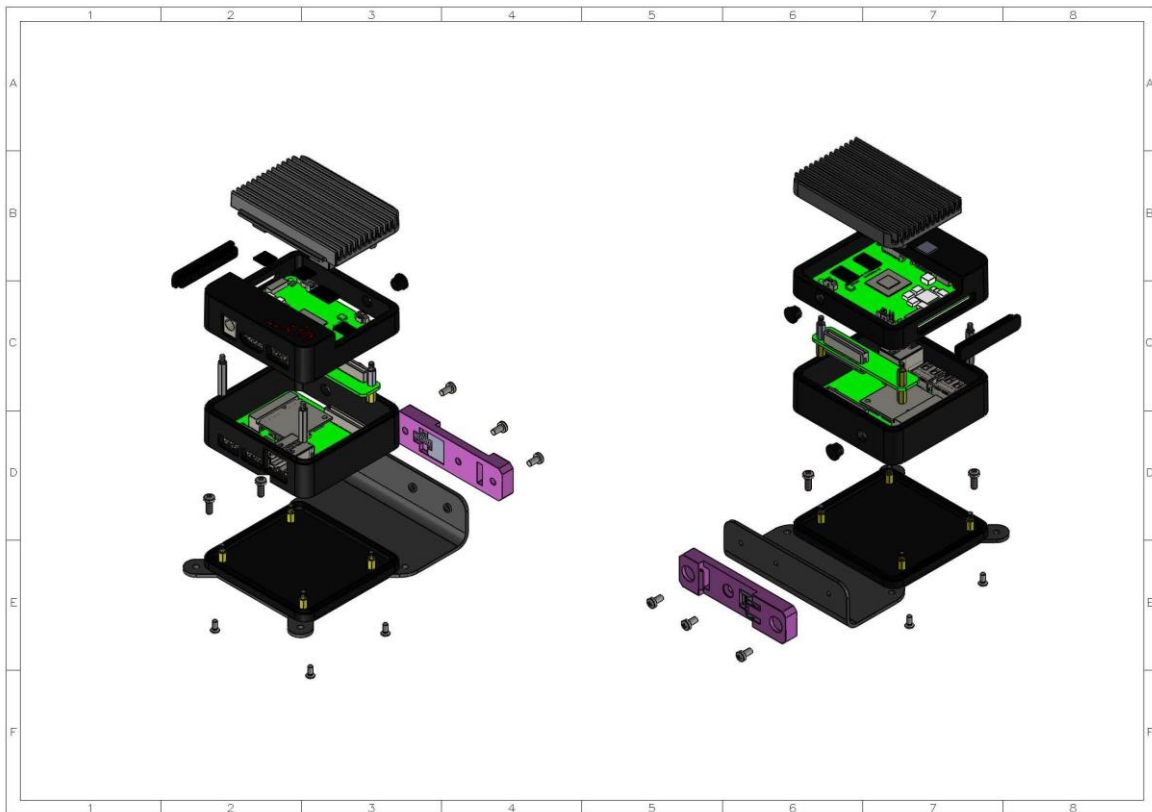# Assembly SOP EP-CHUPC-CRSTHI UP Core High Carrier board AL Chassis

Exploding view:

Parts List

The kit includes the following items:
- Stacking Middle base   @1pc
- M2.5*9 Hex Standoff.   @4pcs
- M2.5*19.5 Hex Standoff.   @2pcs
- SMA plug   @1pcs

Not included in the kit, you may need to prepare by yourself:
- UP stacking board.
- UP main housing and VESA plate

All items are available in the UP Shop at https://up-shop.org

Use the following code for the main housing and VESA plate:
      EP-CHUPCMTVAUPC

For more information about your UP board, software, accessories
and peripherals, please visit
www.up-community.org

Package of high carrier board housing:

Hight Carrier board housing @1pc

M2.5*19.6 Hex stand-off @2pcs
M2.5*9 Hex stand-off   @4pcs
SMA   @1pcs

For more information about your UP board, software, accessories
and peripherals, please visit
www.up-community.org

Assembly Stacking house:

1. The preparation of your UP Core main housing and bottom.

For more information about your UP board, software, accessories
and peripherals, please visit
www.up-community.org

2. Fasten the UP Core Board on the top cover with the two different types of hex standoffs through the four thread nuts as shown on the picture below. Make sure to place the 9mm hex standoffs and the 19.5mm hex standoffs in the same positions as in the picture.
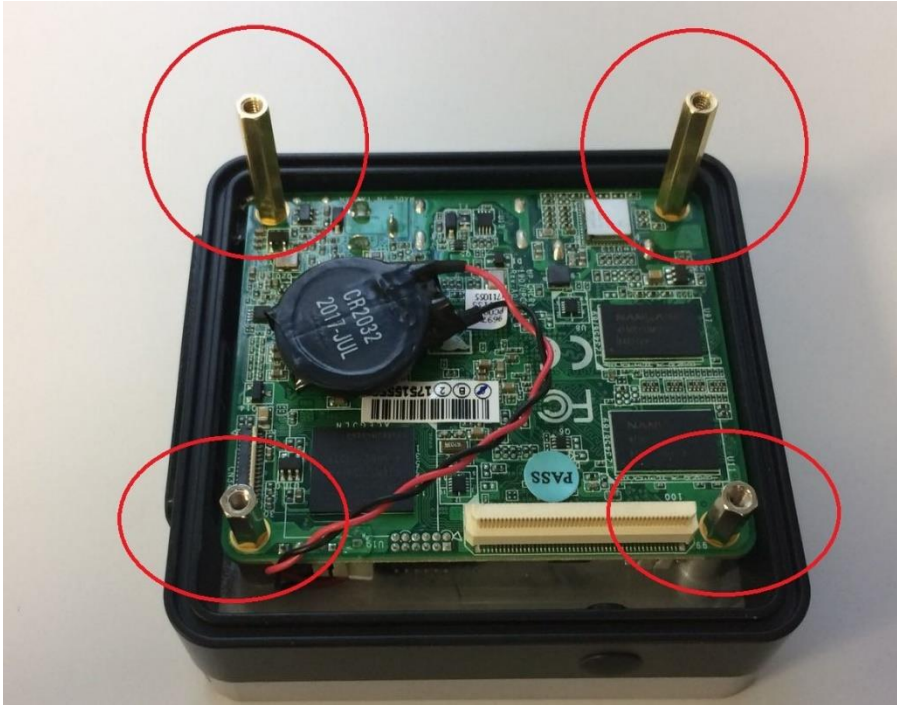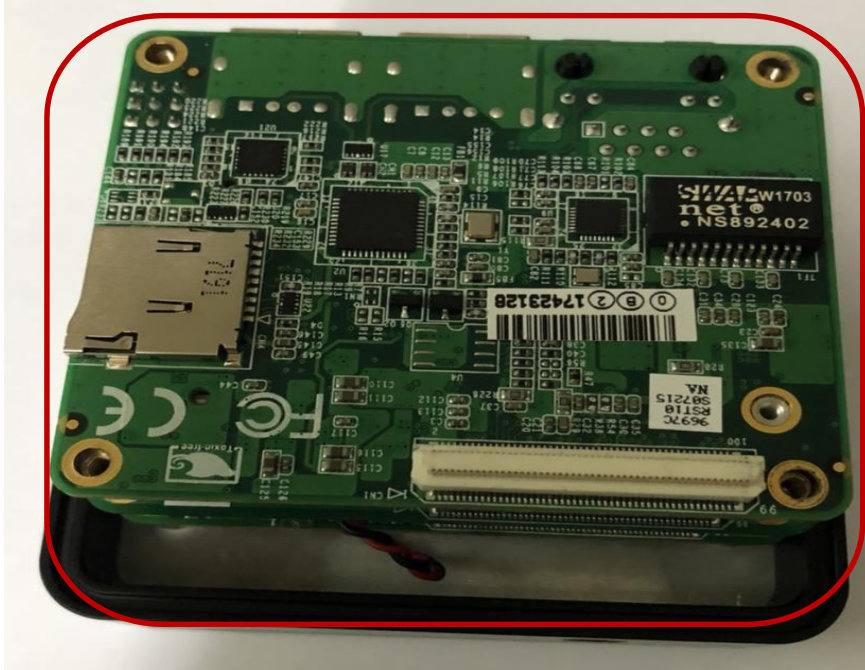
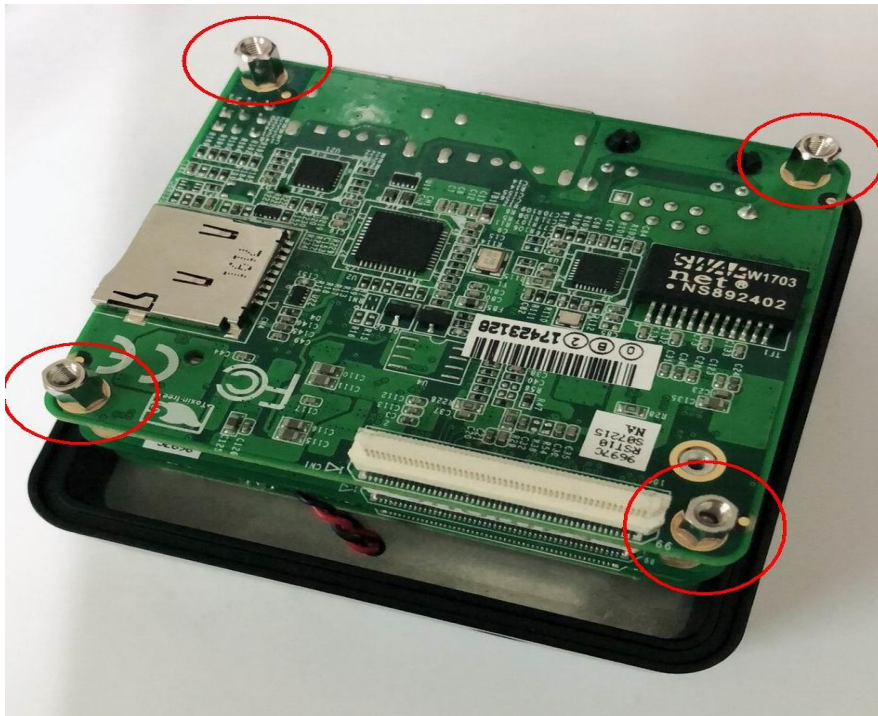3. Fasten the spacer on the motherboard by the two remaining 9mm hex standoffs.

For more information about your UP board, software, accessories
and peripherals, please visit
www.up-community.org

4. Carefully place the UP stacking board on the four hex standoffs.

5. Use the four hex standoffs (5.5mm, silver) that are packaged together with main housing accessory package to fasten the stacking board

For more information about your UP board, software, accessories and peripherals, please visit
www.up-community.org

6. Place the high carrier board housing on top of the main housing, check if the IO side exactly matches the panel sides.

7. Place the bottom base on top of the stacking housing and tighten this with the M2.5*6 screws that are packaged with the main housing.

8. The finished chassis with the high carrier board.